



INSTRUCTION MANUAL **BREW MONK** SPARGE WATER HEATER 25 I

Item N°.: 057.701.25

Volume: 25 litre

NL	Gebruiksaanwijzing
FR	Mode d'emploi
EN	Instruction Manual
DE	Bedienungsanleitung

www.brewmonk.eu



- 1 Tap
- 2 Temperature controller
- 3 Status lights (set temperature reached/heating)
- 4 On off switch
- 5 Lid

Thank you for purchasing the Brew Monk Sparge Water Heater. Please verify using the picture and table above if your Brew Monk is complete. Contact your reseller should you be missing any components. Please read this manual carefully and take heed of the following information to avoid damages. Any failure caused by ignoring the items and cautions mentioned in the instruction manual are not covered by our warranty and we cannot assume any liability.

TIP: You always have the manual at hand with these easy-to-find instructions; just scan the QR code on the back of the Brew Monk Sparge Water Heater.

1. Safety Instructions

- Read all the instructions carefully and keep this manual for future reference.
- Do not use the device if the cord or plug is damaged; it should be replaced before use.
- The machine is intended for use only with 220-240 V and 50/60 Hz. Do not use an adaptor as the wattage power of this device is high.
- Avoid overloading the electric supply.
- If the device requires extra power, do not use multi-outlets of under 13 A, and do not connect any other device to this outlet.
- Check the product's rating label and make sure its voltage is fit for your outlet voltage before use.
- The device must only be used as intended. It must be operated safely and correctly under fault-free conditions. Ensure to check the proper conditions prior to each use.
- The appliance is only to be installed in locations where it is supervised.
- Do not splash any electronic parts of the machine.
- Do not immerse the machine in water.
- Store the machine in a dry place, do not plug it in when not in use.

2. Heating Preparation

- The device must be positioned on a stable, secure and horizontal support structure prior to use.
- A full vessel contains boiling hot liquids and can weigh up to 35 kg.
- The device may not be moved during the heating process. The handles are only meant for transporting the device in an empty state.
- It is imperative to keep children and animals away from the device while it is in operation. Remember boiling water is very dangerous.
- Always clean all the parts of your brewing equipment, hygiene is imperative to get good brewing results.
- Before use, it is advisable to heat a quantity of hot water in the boiler to clean the brewing equipment by using a proper cleaning agent (Chemipro® Wash).

2.1 Before Using the Brew Monk Sparge Water Heater

We advise to rinse the machine with 5 litres of water.

1. Make sure the ball valve is closed.
2. Plug in the device and pour in 5 litres of water.
3. Turn on the power.
4. Set the temperature to 55 °C
5. Add cleaning agent (Chemipro® Wash).
6. Clean the kettle using a soft cloth.
7. When programme is done, switch off the pump and dispose of the hot water using the ball valve.

You are now ready to use the Brew Monk Sparge Water Heater.

2.2 Using the Sparge Water Heater

We advise to keep at all time at least 3 litres of water in the machine.

1. Open the lid and fill the machine with water. Make sure the water doesn't exceed the max line on the machine.
2. Connect the plug to the power outlet
3. Press the 'on' button, the red lamp will start to glow and the water will heat
4. When the desired temperature (selected by the turning knob on the left) is reached, the boiler will stop and the green light will pop up. The kettle will now keep this temperature.
5. Please check the water level regularly to make sure that there's 3 litres of water in the machine at all time.
6. To turn of the machine, please press 'off' and then unplug the machine.

2.3 Dry boil protection

The machine has a dry boil protection, this means that when the water level is too low or all water is boiled out, the machine will turn itself into safety mode and turn off. To start the machine back up, press the reset button when the machine cooled down a bit and start over.

3. Extra notes

Please note that the temperature reading can be off 5-10 °C. This is because the temperature sensor is located in the bottom of the kettle. To obtain better accuracy please circulate the liquid in the tank. For specific purposes where accuracy is needed, please use an external thermometer to receive the correct reading.

4. Technical Data

Model No.:	057.701.25
Volume:	25 litre
Voltage:	220V-240V
Power:	2500 W
Frequency:	50 Hz/60 Hz